

HYDROMIST LITE CARPET CLEANER OPERATOR MANUAL



Clemas & Co. Unit 5 Ashchurch Business Centre, Alexandra Way, Tewkesbury, Gloucestershire, GL20 8NB.

Tel: 01684 850777 Fax: 01684 850707
Email: <u>info@clemas.co.uk</u> Web: <u>www.clemas.co.uk</u>

Contents

	Pago	е
1.	General Information31.1. Important safety advice31.2. Guidelines for the operator31.3. Transporting the machine31.4. Electrical connection4	
2.	Controls4	
3.	Preparing the Machine4	
4.	Operation	
5.	When Cleaning is Finished	,
6.	After Sales Service5	,
7.	Guarantee6	ì
8.	Technical Specification6	ì
9.	Accessories and Cleaning Chemicals7	
10.	Fault Diagnosis7	
11.	Declaration of Conformity8	,

IMPORTANT

BEFORE USE READ THESE INSTRUCTIONS AND RETAIN FOR FUTURE REFERENCE

1. General information

The Hydromist Lite carpet soil extraction machine is designed for the efficient cleaning of carpets and upholstery. It has been designed for the professional user to ensure long service life and safe operation.

We recommend that any user not familiar with carpet cleaning should read these user instructions fully before using the machine. Any queries please contact Truvox International on the contact details provided at the back.

This machine must only be used for the manufacturer's approved application. The Hydromist Lite is designed for the cleaning and removal of normal carpet soil. **Do not use** the machine where it is suspected that the carpet or upholstery contains health endangering dust or debris such as asbestos or chemical waste. If this is suspected **do not proceed**, contact your supervisor or Truvox International for advice.

The following instructions contain important information about the machine and safety advice for the operator.

Equipment must be operated, serviced and maintained in accordance with the manufacturer's instructions. If in doubt contact the supplier of your machine.

1.1 Important Safety Advice

When using electrical equipment basic safety precautions should be followed including the following.

- Read all instructions carefully before use.
- Keep children and unauthorised persons away from the machine when in use.
- Do not leave the machine connected to the electricity supply when not in use; always remove the plug from the socket-outlet.
- Switch off the machine before removing the plug.
- When unplugging pull the plug, not the supply cord.
- Do not operate switches or touch the mains plug with wet hands as this may cause electric shock.
- Do not operate the machine with a damaged supply cord or plug, or after the machine malfunctions or is damaged in any way. Contact an authorised Service Agent for repair or adjustment.
- The plug of the power supply cord must be removed from the socket-outlet before commencing cleaning of the machine or undertaking maintenance operations.

- The power supply cord must be regularly inspected for signs of damage. If the power supply cord is damaged, it must be replaced.
- **Do not** use where hazardous dust is present.
- Do not use in an explosive atmosphere.
- Do not pick up oil or other flammable material with the machine
- Take care when using a machine near the top of stairs to avoid overbalancing.

1.2 Guidelines for the operator

- Operators must be fully trained in the use of the machine in accordance with these instructions, able to perform user maintenance and the correct selection of accessories.
- Operators should be physically capable to manoeuvre, transport and operate the machine.
- Operators should be able to recognise unusual operation of the machine and report any problems.
- Wear suitable footwear to avoid slipping.
- Wear suitable clothing to keep dry and warm.
- Where possible implement job rotation and adequate rest periods to avoid continuous use of the same muscles.
- **Do not** leave the machine running unattended
- Do not allow children to crawl on carpets until thoroughly dry
- Keep cleaning solutions away from children and pets at all times
- **Do not** smoke when using the machine.
- CAUTION This machine is for indoor use only and should not be used or stored outdoors or in wet conditions.
- WARNING Should water emit from the machine exhaust switch off immediately and refer to instructions for Using the Machine

1.3 Transporting the machine

When transporting the machine ensure that all components, tanks and removable parts are securely fastened, and that the supply cord and plug are not trailing. Detach hose and wand from machine for ease of carriage.

Do not lift or transport the machine whilst containing liquid as this will add considerably to the weight.

Take extreme care when moving the machine up or down steps or stairs.

CAUTION – Incorrect lifting techniques may result in personal injury. We advise that the manual handling regulations are followed.

1.4 Electrical connection

 Before connecting the machine to the power supply, check that your supply voltage corresponds with that marked on the rating label on the rear of the machine.

UK only

- The supply cord is fitted with a non rewireable plug containing a 13 amp fuse. Should the fuse require replacement it must only be replaced by a 13 amp fuse conforming to BS1362, and the fuse cover must be refitted. If the fuse cover is lost the plug must not be used until the correct replacement cover is fitted.
- IMPORTANT If the supply cord is damaged, it must only be replaced by a special cord available from the manufacturer or an authorised service agent.

Should an extension cord be used, ensure cord rating is adequate for the equipment. Do not use extension cord in coiled condition as this could result in overheating of the cord.

2 Controls



- Hose release catch
- Vacuum hose inlet
- 3 Solution outlet
 - Anti-foam tank



3 Preparing for use

Make sure both tanks are clean before use.

 Connect the flexible vacuum hose onto the vacuum hose inlet and the high pressure spray hose onto the solution outlet. (fig. 1)

Fig 1



- Connect the vacuum hose and the high pressure spray hose to the carpet cleaning wand or the upholstery tool.
- Fill the clean water tank with detergent and water. Take care to use correct dilution rate for the detergent. Never over fill.
- Fill the anti-foam tank with an appropriate defoamer solution.
- Important Always use low foaming carpet cleaning chemicals. If using foaming carpet cleaning chemical, or if foam develops due to residues in the carpet, ensure that an appropriate de-foamer is used in the anti-foam tank.

Incorrect chemicals could cause damage to the carpets being cleaned or cause the machine to malfunction.

4 Operation

4.1 Starting the machine

- Connect the cable to mains power.
- Ensure the slider on top of the trigger unit is in the closed position.
- Switch on the unit spray or/and vacuum.
- Squeeze the trigger to spray solution onto the carpet/upholstery.
- Maintain a constant pressure of the wand/tool onto the surface to be cleaned in a backwards movement only. (fig. 2).



4.2 Using the machine

- To more thoroughly dry the surface being cleaned, complete the cleaning with a second pass with the vacuum (and no spray).
- Never soak the textile being cleaned while spraying.

4.3 Cleaning Carpet

Colour fastness - Before using cleaning solution or pre-spotter, test carpet for colour fastness on an inconspicuous area. Apply solution to a small piece of clean white material or tissue, and then rub on carpet vigorously. Excessive amounts of dye showing on the material indicate that the colours are not fast, and the carpet should not be wet cleaned.

- Move furniture around to give a clear working area. Cover bottoms of furniture legs where necessary (aluminium cooking foil is ideal). Pin up curtains and drapes.
- Vacuum carpet thoroughly to remove any residual dust or debris.
- Areas of heavy carpet soiling can be removed more easily if first treated with a concentrated cleaning solution or pre-spotting solution.
- Rate of cleaning will depend upon the thickness of the carpet and the degree of dirt in the area being cleaned.
- Do not clean any more than twice. Carpets may shrink if they are over-wet or not properly fixed down.

4.4 Cleaning Stairs

CAUTION - When cleaning on stairs take great care to ensure that machine is stable and cannot overbalance, possibly causing injury to either operator or third party. Use the stair/upholstery tool for cleaning in place of the wand assembly.

4.5 Cleaning Upholstery

This is done in the same way as carpet cleaning except using the upholstery tool in place of the wand assembly. Cleaning is achieved using a gentle dragging motion of the upholstery tool over the material.

- An inconspicuous area of the item to be cleaned should always be tested for colour fastness prior to cleaning. Should doubt exist as to the suitability of the fabric for wet cleaning, the chemical manufacturer should be consulted for advice.
- Loose cushions should be removed and cleaned separately.
- Care should be taken to avoid over-wetting the fabric.

5 When Cleaning is Finished

5.1 Draining and Cleaning

 Before removing the spray hose, pressure in the system must be released. With the pump switched off, hold the spray nozzle over the removable recovery tank and squeeze the spray trigger until the remaining solution has been released. The spray hose can now be disconnected.

- After use check that both solution tanks are empty.
 - o Empty the solution tank and rinse.
 - o Empty the recovery tank and rinse clean.
 - Rinse both tanks out with clean water before storing the machine.
 - o Clean nozzles and hoses.

5.2 Storage

- Always unplug, empty, wipe down and dry the machine after use.
- Wrap supply cord around the handle of the machine ensuring that the plug is not trailing on the floor. Store the machine in a dry indoor area only.

5.3 Maintenance

WARNING - Before undertaking maintenance operations or adjustments switch off machine and unplug from the electricity supply.

The machine requires minimum maintenance apart from the following checks by the operator.

- Supply cord Regularly inspect sheath, plug and cord anchorage for damage or loose connection.
- Solution tank Check filters are clean and undamaged. A damaged or missing filter must be replaced or damage to pump head and spray jet could occur.
- Vacuum filter Check the vacuum filter is cleaned and replaced as appropriate.
- Vacuum head Check and remove any debris or lint build-up from the head.
- Spray jet Check jet for blockage and full spray pattern. Blow through jet to clean. Do not use a pin, as this could damage the jet.

IMPORTANT – All other servicing and repairs should only be performed by a Truvox engineer or Authorised Service Agent.

IMPORTANT – Should the machine fail to operate please refer to the fault diagnosis section in the back of the instruction manual. If the problem / remedy is not listed please contact Truvox Customer Service Department for rapid attention.

6 After Sales Service

Should you require after sales service please contact the supplier from whom you purchased the machine, who will arrange service. Repairs and servicing of Truvox products should only be performed by trained staff. Improper repairs can cause considerable dangers to the user.

Enquire about the Truvox low cost and efficient Maintenance Contract.

7 Guarantee

Your product is guaranteed for **one** year from the date of original purchase, or hire purchase, against defects in materials or workmanship during manufacture. Within the guarantee period we undertake at our discretion, to repair or replace free of charge to the purchaser, any part found to be defective, subject to the following conditions.

CONDITIONS

- 1. Claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of sale, or the machine Serial Number.
- 2. For claims under this guarantee contact the supplier from whom you purchased the product who will arrange the appropriate action. Do not initially return the product as this could result in transit damage.
- 3. Neither Truvox nor its distributors shall be liable for any incidental or consequential loss.

- This guarantee is governed by the laws of England.
- 5. This guarantee does not cover any of the following:
 - Periodic maintenance, and repair or replacement of parts due to normal wear and tear.
 - Damage caused by accident, misuse or neglect, or the fitting of other than genuine Truvox parts.
 - Defects in other than genuine Truvox parts, or repairs, modifications or adjustments performed by other than a Truvox service engineer or authorised service agent.
- Costs and risks of transport relating directly or indirectly to the guarantee of this product.
- Consumable items and wear parts such as drive belts.

This guarantee does not affect your statutory rights, nor your rights against the supplier arising from their sales or purchase contract.

8 Technical specification

230-240 V \sim 50 Hz, Class II construction. Enclosure to IPX4. Fitted with 4,5m supply cord and 13A fused plug.

Model		Hydromist Lite
Code		HML
Voltage	V	230
Pump type		magnet
Pump power	W	50
Pump pressure	Bar / psi	4 / 58
Flow rate	l/min	2
Vac hose length	m	3
Vac motor	W	1100
Water lift	mm / kPa	2000 / 20
Airflow	l/sec	46.1
Solution tank capacity	litre	6.5
Recovery tank capacity	litre	7
Sound pressure level	dB(A)	78
Size (L x W x H)	cm	53 x 37 x 43
Cable length	m	4,5
Weight empty	kg	10
Warranty		1 year

Truvox International is a BSI Registered Company and our policy is one of continuous development. We reserve the right to change specifications without prior notification.

9 Accessories and Cleaning Chemicals

Chemical	Bottle size	Bottles per case	Part No.	Usage
Hydromist Carpet Cleaning Solution	500ml	10	HMC01005	The quality way to beautify carpets and upholstery Formulation lifts dirt and stains out of your carpets and helps
	1 litre	10	HMC01010	
	5 litre	4	HMC01050	prevent re-soiling. Leaves carpets and upholstery soft and fresh.
Hydromist Pre-spotter	500ml trigger spray	10	HM003005	Formulated to help remove stubborn stains from carpet and upholstery

IMPORTANT: Genuine accessories and chemicals are only available from authorised Service Agents or the Truvox Customer Service Department.

10 Fault Diagnosis

Problem	Reason	Remedy	
The spray pump and vacuum does not work	Power failure.	Check the main fuse*, the power supply cord and the plug.	
No spray or the spray is not even	Spray nozzle blockedSolution tank empty	 Check the spray pipe and nozzle. Is there water in the tank? If there is water in the tank, wait for a couple of seconds for the pump to build up pressure. If the tank is empty, fill it as indicated. 	
	 Solution feed filter blockage 	The filter in the clean water tank, the pipe or the nozzle may be blocked. Switch off the unit and perform maintenance.	
The vacuum power falls.	The recovery tank may be full.	Empty recovery tank.	

^{*} If the fuse blows several times, the machine should be checked by an authorised Service Agent.